



CIRCONTROL
Mobility & eMobility



Raption 50 Series


User manual




CIRCONTROL RAPTION 50 QUICK CHARGER

To start charging:

1. Put the card to the card reader or select Electric Vehicle Charging Station (EVCS) in the Mobile app. If you want to change the language, click on the flag.


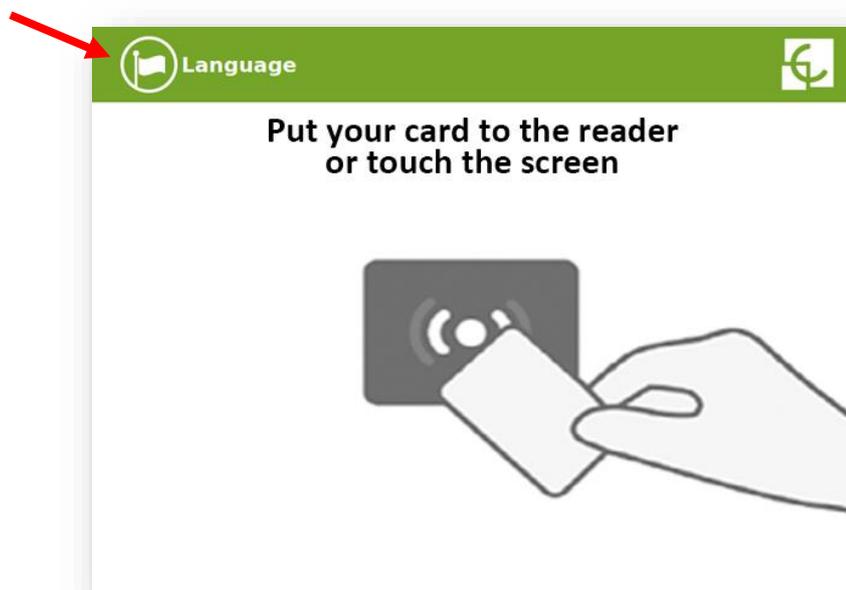


2. Select the appropriate connector type for your vehicle.

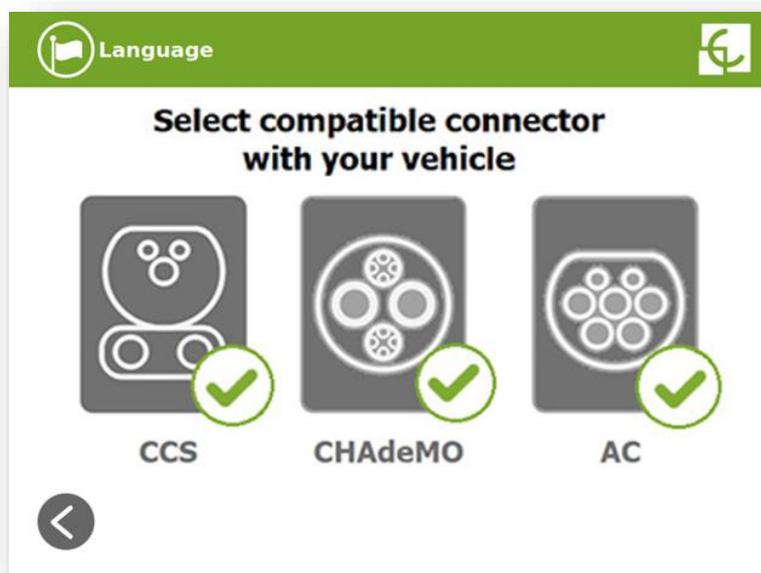

The connector can be removed from the holder by selecting it on the station screen:

- The CCS connector (No.1) must be grasped by the handle and pulled out of the station downwards when the red light above it has gone out.
- The CHAdeMO connector (No.2) must be grasped by the handle, the button on it pressed and pulled out of the holder downwards when the red light above it goes out.
- Grasp the Type2 connector (No.3), press the locking button above it and pull it out of the holder.

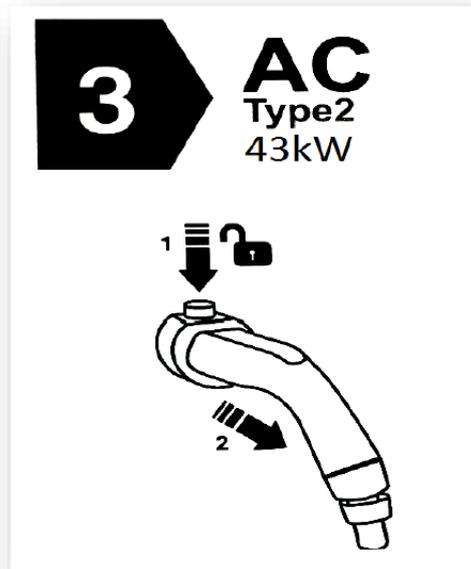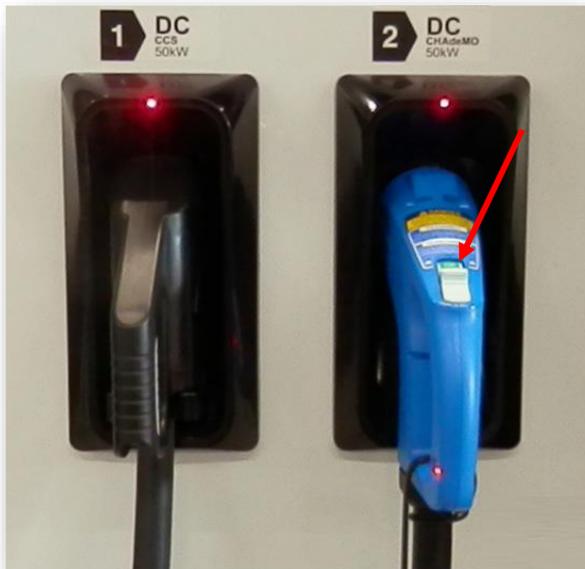

3. Connect the vehicle and press the "START" button.



To finish charging:

- Put the card to the card reader and press the "Stop" button on the screen, or stop it in the Mobile app.
- A summary of the charging session will be displayed on the screen.
- Disconnect the vehicle to finish charging.

